

Part number	Product name
1118010AM66-21765	Turbocharger assembly
3701022-E00-WZ20	Vacuum pump inlet tubing
1008015-A5H-DF1A	Inlet nozzle
1003010A460-0000A	Cylinder head assembly
3724092-E20-2001B	Integrated post-processor harness assembly
1009010DM80-099C	Oil pan assembly
3509010A6BE-176NA	Air compressor assembly
3601115-BD4-0000	Engine control unit assembly
1023032-E00-0000B	Steering pump belt
3708100-A71-KM10M	Starter assembly
3701010AB90-KM1A	Generator assembly
1009023-101-0000	Intermediate plate - oil pan
1307041-C00-0000K	Pump inlet nozzle
1023021-M50-0000B	Wedge belt
3701010AB81-JB5A	Generator assembly
1129DDD-541-JH40S	High pressure tubing assembly
1129DDD-541-JH40W	High pressure tubing assembly
1002020-300-0000	Oil gauge assy
1207074AMH0-0000	EGR Valve Seat Pipe support (4)
3407020A64J-1D55VA	Power steering oil pump assembly
1013100-B21-0000	Oil cooler assembly
1008044-81DR	Gasket. - Exhaust pipe
1207071-M60-01607	Connecting pipe
1308010A48M-YM10	Fan assembly
1160220-A66-KM1A	Urea tube assembly X1.6m(urea pump - urea nozzle)
1308032-29D	Fan belt
3701010-B5V-BH10M	Generator assembly
LC250000-PJ4P	C25 four-piece accessories
1004BBB-M01-C01	Piston ring assembly
1002061-M36-068R	Gear house cover - flywheel housing
1119062-M01	Engine intake pipe
3602070-B5V-0000	Electronic throttle assembly
1002056BC00-0000	Gasket - crankshaft front oil seal seat
1005120AB5V-HL10	Flywheel and ring assembly
1119062-M11	Engine intake pipe
1005200-A05-0000	Shock absorber assembly
1005120A473-219A	Flywheel comes with ring assembly
1104030AB05-YF10	Fuel line assembly - Feed oil pump to wood filter
3407003BB41-KM50	Power steering pump coupling plate
1003018C29D	O-ring
1011051A81D	Oil pump outlet pipe connector
1006005AA37-0000	Air compressor driving gear
1005044AB41-WZ10	Belt pulley fastening bolts
1007024-400-0000	Valve spring seat
1006044-C00-0000	Bushing - Timing intermediate stack gear
3509100-B61-ZXK1A	Air compressor assembly
1006060-M01	Timing intermediate gear assembly
1002313DA34-0000	Gear chamber cover
1006040-81D	Timing intermediate stack gear assembly
1306021-M65-078N	Thermostat holder
1006052A001-0000	☆ Gasket - Gear shaft (2)
1003046-300-0000	☆ Cylinder head bolt
1009010AL3H-2020HC	Oil pan assembly

1002071BB45-HG30	Gear room (supplementary machining drawing)
1601010DA01-YK10	Clutch housing assembly
1008017AB01-0000A	Intake gasket
1111017-E20-0000	Oil metering proportional valve
1003017-6C1-0000	briquetting
1118010-E20-SF10WY	Turbocharger assembly
1111010-B5W-XJT80ELK	Fuel injection pump assembly
3724080AE00-2010	Engine harness assembly
2S1008019-E20-0000	Hose - intake nozzle
1009010A613-VP10	Oil pan
1008022-E00-0000	Waste gas mixer
1007050J29D	Push rod assembly
3724080A640-2010DHC	Engine harness assembly
1111010BB5G-HL10KD	Fuel injection pump assembly
1111206A470-0000	gasket
3509010AL38-BF10H	Air compressor assembly
1013010-6BA-0000	Box type oil cooler assembly
1008051-422-JH30	Clamp - exhaust manifold
1104050A68G-0858	Return pipe assembly
1118010AL39-JH10	Turbocharger assembly
1308010-B81-YT10	Silicone oil clutch fan assembly
1007082A001-0000	Intake valve seat
1307017B001-0000	gasket
3407020A604-0646	Power steering oil pump assembly
1004BBBAMH0-0000	Piston ring assembly
3509230-M54-0B2005	Air compressor energy-saving steel pipe assembly
1013022-M01	Oil filter connection nut
3509010A210-3100L	Air compressor assembly
1111100AA03-2010	Fuel injection pump assembly 4PW514
3701010-61S-3100XZ	Alternator assembly
2501004-29D	Sealing sleeve - Water pump
1001010-E22-DF10	Front suspension bracket (intake side
1207020BB21-0000	EGR cooler
1009070D600-4110	Oil gauge assy
3407024-29D	Gasket - Power steering pump
1104080A53H-HL10	Fuel intake line assembly
3701010A581-3050	dynamo
3509010-420-054D	Air compressor assembly
1009060A600-4110	Oil gauge tube assembly
1111228AM08-0000	High pressure oil pump connection flange
3724092-L3J-2080HCU	Integrated post-processor harness assembly
1307010-B90-502AF	Water pump assembly
3407020-M40-0000	Power steering oil pump assembly
LC000000-PJ4P	4DLD-17E3 four combination accessories
3724417CM71-1D70PA	Engine harness bracket
1007164-M50-000Y	Electromagnetic valve seat
1008019-E20-0000	Hose - intake nozzle
1305010B001-0000	Drain switch assembly
1129075-47N-0000	High pressure tubing clamp assembly (supplementary drawing)
1007024-E00-0000	Valve spring seat
LC000000-PJ6P	CA4DLD-17E3 six combination accessories
1002061CM70-000JA	Gear house cover - flywheel housing
1002304-A03-2010J	Gear chamber cover gasket
1001032-640-1B1505A	Right front suspension bracket

1002056-M01	Crankshaft front oil seal seat gasket
1008013-29D	Gasket - intake pipe right cover plate
1005015BL00-0000	Crankshaft comes with gear assembly
1009010CB46-SS1A	Oil pan assembly
1005120-53H-0000	Flywheel and ring assembly
1005120-53H-000A	Flywheel and ring assembly
1003031BC00-0000	Cylinder head cover
1008016AB71-5010T	Intake manifold
1002021-M01	Lifting bolt
1003120BA01-0000	Snorkel assembly
1010012-E00-0000	Gasket - Oil collector
1002004EA01-0000	Cylinder head gasket
1009070AB61-DK4AF	Oil gauge assy
1009600-M36-068R	Oil gauge tube and bracket parts
1001033AM01-074AP	Left front suspension bracket
1002105-A0P-DLC10	Drain valve socket
3724080AB6L-AS20	Engine harness assembly
1005071K29D	Flywheel bolt
1007050-53DZ	Exhaust valve push rod assembly
1001020BA01-KM1A	Front right bracket assy
1306100AM5B-02001	Thermostat component
1006047-48G-0000	Gear shaft (1)
1005122-B01-0000	Tooth ring - Flywheel
1003058B001-0000	Liner - lifting lugs
8103015-E00-2002	Air conditioning idler support
1112010-B56-AS10KD	Fuel injector assembly
1004018-470-0000	Piston pin
1208100-M34-XZ10JL	SCR rear processor assembly
1104054-M01	Oil rail return pipe clamp assembly
1118010A551-0010	Turbocharger assembly
1014036-101-0000	gasket
1129DDDA640-0000J	High pressure tubing assembly
1111010CB6C-YJ30U	Fuel injection pump assembly
1002080-36D	Trapezoidal frame assembly
1118010AB82-0000HY	Supercharger assembly
1161010-C20-0000	Urea supply module
1014022-62G-0A46B	Return pipe - oil and gas separator to oil pan
1104030-551-YT1F	Fuel line - oil pump to wood filter
1104050A640-0000	Return pipe assembly
3407020-611-1776	Power steering oil pump assembly
1007031-840-0000B	Valve guide
1118060-432-CG10	Intake line assembly - Supercharger
1308081-M63-JH10	Wind shield bracket - Intake side (bottom)
1104050-471-SW1A	Injector return line assembly
1112010A48G-0000BY	Fuel injector assembly
3407020AB81-YT10	Power steering oil pump assembly
XA632010-PJJT	A63-2010 cylinder body total
1013021-M01	Oil cooler cover plate
1308043-630-114BA	Fan drive shaft spacer sleeve
8103021AE00-2010	Air conditioning auxiliary support one
1208100-590-2040AHCBC	SCR rear processor assembly
1012011-E00-0000	Filter cap
3724080-551-4420	550 engine harness
1009066-E00-2001	Bracket - Oil gauge tube

Q43080	Elastic stopper for hole
Q80010	Sleeve (to trivalent chromium
3724080B621-0000B	Engine harness assembly
1008044-6BE-0000	Exhaust manifold gasket (1)
MM002060A-PJQZ	6DM2-42E3-2060A front wheel support with fan pulley assembly accessories
3708010-101-0000M	Starter assembly
1210100-E20-2001ABW	Rear processor assembly
1161210-682-0000	Urea nozzle
3407020A63J-3030	Power steering oil pump assembly
1118031BM70-000J	Supercharger heat shield
1111000AB46-ZY20	Fuel injection pump assembly
1210005CL3K-2050HCBW	Post-processing system components
1118010-541-0000	Turbocharger assembly (Order No. : 730237-0009)
1117050A29DB	Crude fuel filter assembly
1118010A640-0000	Turbocharger assembly
1308046-630-114BA	Double stud
1005014AB43-0000X	Crank shaft
3701322-153-0010	Generator support
1210005AE20-501AK	Post-processing system components
K1520000-PJJT	CA4110/125ZA1 cylinder block fittings
3701342-101-HYB10	Vacuum pump return tubing nozzle
1112011-621-0000	Fuel injector pressure plate
1307003-M10-01085	Pump belt
1002017-M01	Cylinder liner water seal ring
1005194-M00-2060A	Pulley - Crankshaft
1146112BM70-000J	Mixer stand
1104030AM60-0000	Intake line assembly - oil pump to fine filter
8103014-104-JH1G	☆ Stop Ring
1002013-E00-0000	Main bearing bolt
1008023-84E-0000	Inlet nozzle
1023010-M00-2060A	Automatic tensioning wheel assembly
3708010-450-JH20W	Starter assembly
1008023-600-0367	Inlet nozzle
3407020AM00-B82A	Power steering oil pump assembly
3708010-432-CG10M	Starter assembly
1112020-454-0000B	Injector needle valve pair
1012010-470-YT1H	Oil filter assembly
1111010-853-0000	High pressure fuel injection pump assembly
1111010-62J-0000W	Fuel injection pump assembly 6P1249
1210100-M60-21762HCACT	Rear processor assembly
1009070-29D	Oil gauge assy
1307010AB81-JB5AZ	Water pump assembly
1104040A153-JH2G	Fuel line assembly - Wood filter to fuel injection pump
1008071-81D	Double stud M8-125
1002061BM35-0001J	Gear house cover - flywheel housing
3407020A551-BF20	Power steering pump assembly
1004BBB-B5G-0000	Piston ring assembly
1009060B630-XW2A	Oil gauge tube assembly
3509040-101-JH7D	Air compressor inlet tubing assembly
1111000-B73-AS21KD	Fuel injection pump assembly
3509041B541-0010	Air compressor return oil pipe assembly
1014017BM50-000J	Snorkel - gas separator
WB90000C-PJJT	B90-000C cylinder block fittings status
1307010-M39-0E1901	Water pump assembly

1601010AA01-WZ1A	Clutch housing and disengaging fork assembly
1003032AC00-0000	Lower frame - cylinder head cover
1011010CB80-0000	Oil pump assembly
1104030AB5G-0000	Fuel line assembly - fuel injection pump to wood filter
1111001-B61-0000	Fuel injection pump gear
1003067-400-0000	Nut - exhaust manifold
3750011AB45-0000U	Air heater body
1009031-29DZ	Oil pan seal gasket
1308040-M01	Fan support assy
1104040A551-YT1F	Fuel line - Wood filter to oil pump
1308042-M50-21560KAJ	Fan drive shaft
K-1007090	Rocker arm shaft assembly
1129110AC20-0000	High pressure oil rail assembly
1010012-53D	Gasket - Oil collector
1172010AM62-21907	Hydrocarbon injection module assembly (diagram)
1023015-M50-02000	Flat idler assembly
1003016-6BA-0000	Fuel injector steel sleeve
XA01LQ1A-PJJT	A01-LQ1A cylinder block fittings status
3708010-C90-FD10M	Starter assembly
1009060AB81-JB5A	Install oil gauge tube assembly
1205201AL60-0001	TWC post-processor tailpipe
6310-2Z/C3WT	Rolling bearing 6310-2Z
3724030D81D	Fuel injector harness assembly
1207020-580-2020A	EGR intercooler assembly
1306012-E00-0000	Thermostat seat seal ring
1008058-L10-SJ10	Exhaust pipe heat shield (2)
3602023BE20-DF10	Urea quality sensor assembly
1207115AB90-JHK10	EGR intercooler intake pipe
3407020-845-0945	Power steering oil pump assembly
1118060B601-046B	Supercharger inlet line assembly
3701010-61K-VP1GW	dynamo
1306020A101-JH50	Thermostat component
1005046-460-0000	Belt pulley
1308032-61K-VP1GW	Fan belt
1118094-29DZ	Gasket - supercharger return oil line
1023012-61K-VP1GW	Pulley - Tension pulley
1111010A432-CG20	Fuel injection pump Assembly 6AW1120
1117010A550-0000W	Fuel filter assembly
1207135-M70-000J	EGR cooler outlet pipe assembly
1306013-M50-0000	Thermostat top cover
2000202-53C-HKN10	clamp
1308001A101-CN30	Fan pad
3602130A607-0000	Camshaft position sensor
1208005AM5B-2A1560KJHC1CT	Post-processing system components
1009070-M60-051N	Oil gauge assy
1013010-M54-0000NY	Oil cooler assembly
3701010-B22-JB10	Generator assembly
1118060-M00-0590	Supercharger inlet line assembly
1129075A29DJ	High pressure tubing clamp assembly 2
1014031-C00-0000	Connecting pipe joint
1004020A96ED	Connecting rod assembly
1014047-68P-0000	Transition hose
3724080AM35-JH80	Engine harness assembly
1008016AB81-ZX10	Intake manifold

1129DDDAE20-0000	High pressure tubing assembly
1308032-C00-0000	Fan belt
1004BBBAL3B-0000	Piston ring assembly
1207020AE00-0000	EGR cooler assembly
3724021-M01	Harness bracket
Q1840845TF2	Hexagon flange face bolt
1007226-M50-000Y	Spring frame fixing bolt joint
1003046-B90-0000	Cylinder head long bolt
3724080-591-JNP10	Engine harness assembly 1
X3451.1M12X1.25	Hinge bolt M12X1.25
3504002-M34-XZ10J	Clamp 1- exhaust brake valve
1002402-M50-000J	Gasket - transition joint
3509010A151-JH40	Air compressor assembly
1118010-M15-1A91UAY	Turbocharger assembly
1005120-E00-2001	Flywheel comes with ring assembly
1014024-53D	Connecting hose
1001032A640-076W	Right front suspension bracket
N8400000-PJ4P	840 four combination accessories
1004BBB-M5B-0000A	Piston ring assembly
2S1207135A6BE-0000	EGR cooler inlet pipe assembly
3701010D013-HL20M	Generator assembly
1118047-M80-2010A	Double stud - Supercharger
1207023-A5J-KM3A	Gasket -EGR outlet
3919000-M00-0001	Special tool for cylinder head pressing water
1129DDD-440-0000	High pressure tubing assembly
1008091A214-0000	Hose - intercooler intake pipe
1117001-630-0000	Rotary fuel filter
1014010-68P-0000	Oil and gas separator assembly
3724080-M18-0E91W	Engine harness assembly
3509010D852-01050	Air compressor assembly
1005120-472-DD20	Flywheel comes with ring assembly
1007028-M01	Air lock block
3509010B614-0435	Air compressor assembly
1118010BM50-0000SH	Turbocharger assembly
1104030BB81-0000	Fuel line assembly - Wood filter to oil pump
1002069AE00-0000	Gear chamber return oil line
1118080-472-XJ10	Return pipe assembly
3701010-420-0300	Generator assembly
1117010AB90-KE00	Diesel filter assembly
1210100-L3H-0000ABW	Rear processor assembly
1111000-101-HL20	Oil Pump (4AW135)
1118080-29D	Supercharger return oil line assembly
1007061ABA0-0000	tappet
1118302BB90-0000	Supercharger lubricating oil inlet pipe
1002062-M10-091W	Vehicle intake pipe support
1010020-M5B-02001	Fixed support assembly
1104DDD-A34-0000X	High pressure tubing assembly
1023021B61Y-0000	Wedged belt
1207045-C10-0000	Control arm Assembly (II)-EGR
1002061BM50-000J	Gear house cover - flywheel housing
3509230-M55-092W	Air compressor energy-saving steel pipe assembly
1011010A001-0000	Oil pump assembly
3750010-M60-01607	Air heater intake nozzle assembly
3509050A29D	Oil intake line assembly - Air pressure pump

1009010A671-207A	Oil pan
1004011A631-0000M	piston
1104040-48K-HL10	Fuel line assembly - Wood filter to fuel injection pump
1104030A63J-0000	Fuel line Assembly (1)
1129085-M01	High pressure tubing clamp assembly 3 (diagram)
1111010-M80-0000J	Fuel injection pump assembly
1011070-C00-0000	Flowline assembly
1111010-M80-0000W	Fuel injection pump assembly 6PH123
1150081A65E-0000	Natural gas filter element
1023021-640-XJ10	Wedge belt
LC000000-PJIT	CA4DLD-17E3 cylinder block accessories
3724021EM60-0000	Engine harness bracket 1
1012010BB61-0000	Oil filter assembly
1118148-M71-070P	Anti-surge valve outlet hose
1009010C81D	Oil pan assembly
1160220-A61-KM1AEL	Urea tube assembly ×1.1m(urea pump - urea nozzle)
3724024-M01	Harness bracket
1104160-E00-0000	Fuel injection pump lubricating oil pipe
1007090BB61-0000L	Valve rocker arm shaft assembly
1111010-M50-0000	High pressure jet pump assembly
1111010-B5P-YFT1ALK	Fuel injection pump assembly
1002028-E00-0000	EGR cooler inlet pipe 1
1111010AL50-0000	Fuel injection pump assembly
1003010BB01-0000X	Cylinder head assembly
1005060B001-0000W	Oil seal after assembly
1308051-6A5-1B60RA	Fan pulley
1209200-B91-5020KNBW	DPF rear processor assembly
1161010-M54-JH80	Urea supply module assembly
2S1104030-L3H-0000	Fuel line assembly - oil pump to wood filter
1308032-421-YX60	Fan belt
3509010A6A5-1G93RA	Air compressor with bracket assembly
3708010-A5H-DX1A	Starter assembly
1003031AM36-0000D	Cylinder head cover
1207030-C10-0000	EGR controller
3407020BE00-201H	Power steering pump assembly
3509286AM66-02008	Air pressure pump intake pipe
1307010-301-JH10	Water pump assembly
1307010A153-0010	Water pump assembly
1005190-6BA-0000Y	Silicone oil shock absorber
1008072AM00-0590	Cover plate - Air heater
1111216C481-0000	Fuel injection pump transmission gear
1308010-53E-HL10	Fan assembly
1023021-61Y-XJT10	Wedge belt
1012024-591-0000	gasket
1104040BM39-0000	Intake line assembly - wood filter with high pressure oil pump
3724080AM11-051B	Engine harness assembly
1009024AM54-082T	Middle plate 2
1307010A005-XY10	Water pump assembly
1118023AM40-0000	Exhaust gas control valve to vehicle inlet hose
1151040-MH0-0000	Pneumatic control globe valve assembly
1207022-M60-0000	V-type clamp -Φ75 flange
1151033BM4K-0000	CFV valve outlet hose
1008024-B22-JB1A	Inlet nozzle
3701010-472-DD10	Alternator assembly

1118143-M60-083N	Single tube clamp
KZ-1005037	☆ Gear
1146041BM70-0000	Mixer inlet transition flange
Q43108	Elastic retainer for shaft
3724080C470-0000	Engine harness assembly
1207020AB80-DX2C	EGR cooler
1118060-471-0001	Intake line assembly - Supercharger
1007110-M50-000Y	Intake valve rocker arm assembly
Q43130	retainer
3509010-422-JH10	Air compressor assembly
Q43132	Elastic retainer for shaft
1007154-E00-0000	Rocker arm shaft fixing bolt
3724080C493-0000	Engine harness assembly
1207090-M60-0000	Outlet pipe assembly -EGR cooler
1305010A101-0000	Drain switch assembly
1111227-M01	sleeve
1013011B602-2030	Oil cooler body
1004011-64D-0000M	piston
1111109-E00-SF20	Oil inlet pipe
1118070-M60-0000	Gas line assembly - Auxiliary gas-connected engine regulator
1701915-M01	Deep groove ball bearing
1305010-29D	Drain switch assembly
1112100-A0Y-0000	Fuel injector assembly
1129110-81D	High pressure oil rail assembly
1112308-001-0000	Adjusting gasket
1009060-600-070A	Oil gauge tube assembly
3724080A696-202DBHC3N	Engine harness assembly
1014019-M40-0000	Return pipe - oil and gas separator
1207060AM70-000J	Exhaust manifold to EGR connection tube gasket assembly
3509020AM50-01306	Air pressure pump return pipe assembly
1023010AM35-2080A	Automatic tensioning wheel assembly
BE00WZ10-PJJD	E00-WZ10 Body positioning pin assembly
1117010-96E	Fuel fine filter assembly
BE00WZ10-PJJT	E00-WZ10 cylinder block accessories
1308042-6B5-0000	Fan drive shaft
1012015-051-0000M	Rotary oil filter
1008016-101-0000	☆ Intake manifold
3602023BM60-0000	Urea quality sensor assembly
1003058-M60-0000	Front lifting lug - cylinder head
1207030-M60-0000	EGR controller
1111011-617-0000	Electric control unit pump assembly
1307010AM50-091R	Water pump assembly
3509020-M39-0D75H	Air pressure pump outlet pipe assembly
3407020A604-0655	Power steering oil pump assembly
1009060CB81-JHK10F	Install oil gauge tube assembly
3509010-101-SR40	Air compressor assembly
1012010-36D	Rotary oil filter
3701010-017-SG8KM	Generator assembly
1118110-623-3020	Bellows assembly (supplementary drawing)
3724080BM00-0590	Engine harness assembly
3509030B53DK	Air pressure pump inlet pipe assembly
1307100CA5G-YF1A	Water pump assembly (supplementary drawing)
1210103-M6A-0000C	V Clamp gasket
1008023CM70-000J	Inlet nozzle

1118230AM70-000J	Supercharger - exhaust manifold gasket assembly
1003045-BA0-0000	Oil baffle
F4320000-PJJT	F4320000 cylinder block fittings
3701010B580-1Y142	Generator assembly
1118010A42D-VP10J	Turbocharger assembly
1014048-M01	Oil return clip B
3724080A682-0000	Engine harness assembly
F4320000-PJLW	6DF1D Connecting rod shoe (sleeve)
L65A038V-PJJT	CA6SL2-31E3N2-038V cylinder block fittings
1104040C470-0000	Fuel line Assembly (2)
L63A0M01-PJJT	CA6DL2-35E3R-6 cylinder block fittings
1011042-E00-0000	O-shaped rubber seal ring
1005120-B01-0000	Flywheel and ring assembly
1118010AM18-0E91WSH	Turbocharger assembly
1003056B001-0000	Fuel injector sleeve
X340318X24	Copper gasket 18X24
1207050AMH0-0000	EGR flow metering device assembly
1013011-591-0000	Oil cooler cover plate (supplementary drawing)
3724500-73D	Air heater with wire assembly
1007035-840-0000	Exhaust valve duct seal assembly
1009070A101-0000	Oil gauge assy
1145040AM71-070P	Carburetor intake connection
1210210-M60-0000F	DPF pre-packaged assembly 12X10
Q617B08F36	Hexagonal head plug
1112010-B5N-0000LK	Fuel injector assembly
1009010EM14-01057	Oil pan assembly
1104050A62F-0000	Return pipe assembly
1005046-6A5-11905A	Pulley - Crankshaft
1307010-733-JL10	Water pump assembly
3701010-6B5-0000	Generator assembly
1207029AE06-0000	EGR water inlet hose II
MM35000J-PJ4P	CA6DM2-42E51-000J four combination accessories
Q72240F36	Bowl plug
3407020A551-SJ10	Power steering oil pump assembly
3407020BB21-502A	Power steering oil pump assembly
1118010-40C-RL10HY	Turbocharger assembly
1008051A051-0000	☆ Clamp - exhaust manifold
1118010-53C-AS10HY	Turbocharger assembly
1111010-M01	Fuel injection pump assembly
MM35000J-PJ6P	CA6DM2-42E51-000J six combination accessories
1006100-B5G-0000	Timing idle gear fitting
3750020-A03-0000U	Flame preheater
1003032A001-0000	Packing strip
1307010B003-0000	Water pump assembly
1002061-M10-01509	Gear house cover - flywheel housing
1307010-204-2010	Water pump assembly
1002200-M70-0000Z	Piston cooling nozzle assembly
1112011A400-0000	☆ Fuel injector pressure plate
1008301AB90-501A	Heat shield - Exhaust manifold
1001025AE06-501AKC	Mounting cushion assembly
3407020AB81-502A	Power steering oil pump assembly
1118072-E00-2001	Vehicle exhaust gasket
1007016-M50-0000	Exhaust valve
1118142B726-YT1Y	Gasket - exhaust manifold

1151030-6C1-0000	Two-stage pressure regulator assembly
3724080DM54-047T	Engine harness assembly
F5910000-PJIT	4DF4-15E4 cylinder block accessories
1308032-013-303B	Fan belt
3750011-001-0000	Air heater wire - for grounding
1118120BM40-0000	Supercharger inlet pipe assembly
3602080-M70-0000	Natural gas pressure temperature sensor assembly
1012010-B21-0000WF	Oil filter assembly
1009070BM50-21587J	Oil gauge assy
1009027-001-0000	Front left plate - oil pan
3724080AE06-SF10	Engine harness assembly
1008024-B81-WZ10	Inlet nozzle
1160210-682-0000CEL	Urea tube assembly × 1m(urea tank - urea pump)
1013010-051-0000	Oil cooler assembly
1161010B682-0000	Urea injection metering pump
1207130DB81-0000	EGR intercooler outlet pipe
1104068-471-YT1H	Tee joint
1023030-E00-0000B	Automatic tensioning wheel assembly
1104020-L20-SJ00	Return pipe assembly (2)
1004018-M50-0000	Piston pin
F40C0000-PJ4P	F40C0000 four combination accessories
3754040-M60-0000A	Exhaust gas control valve
1307010C81DX	Water pump assembly
1112010-407-0000	Fuel injector assembly
1306013-600-070A	Thermostat cover
1111216-47N-0000	Fuel injection pump transmission gear
1207031BB90-JHK10	EGR intercooler inlet pipe
1017010AM50-0000	Centrifugal oil filter assembly
3509011-481-0000	Driven gear - air pump
3601115-B4L-0000	Engine control unit assembly
1207115AB81-DK5A	EGR intercooler intake pipe
1210103-6BE-0000	V Clamp gasket
1118010BL3K-2045SH	Turbocharger assembly
1174010AM62-21760	Hydrocarbon injection line - metering module to injection module
3701010-B90-JB3AC	Generator assembly
1009031-021-DL20	Oil pan seal gasket
1008023A62L-206DA	Inlet nozzle
1118080-L3H-2020HC	Return oil line assembly - Supercharger
1207038-BA0-KM1AC	EGR intercooler inlet pipe
1118055-M60-0000	Transition joint assembly
1129070-M60-0000	pressure oil rail
3509286-M62-01907	Air compressor intake pipe
1002061AM62-042N	Gear house cover - flywheel housing
1023010AA51-YT10	Tension wheel assembly
1117010-B90-000CJ	Fuel filter assembly
1002410-A5J-KM3A	Dipstick sleeve assembly
1307070AM50-02000	Idler assembly
1210100-E20-DF10ABW	Rear processor assembly
K0010000-PJC1	Timing intermediate gear (A) component
K0010000-PJC3	Timing intermediate gear (3) components
1002150-A51-0000	Pressure regulating valve assembly for main oil passage
3509286-M55-092W	Air compressor intake pipe
L63A0M01-PJLW	M01 Connecting rod tile (sleeve)
1008072-201-0000	Gasket - Supercharger

3509010BC00-0000	Air compressor assembly
1207028AA5G-YF1A	EGR outlet pipe assembly
1129070-L50-0000	High pressure oil line assembly
1308010-E00-WZ10	Silicone oil clutch fan assembly
Q72218F36	Bowl plug
1118005-E20-DF10	Exhaust manifold
1118142B520-0000	Gasket - exhaust manifold
1011015-581-444A	Oil pump component
1005046-6BA-0000	Crankshaft with multiple wedges
1151010-84E-0000	Continuous flow control valve assembly
1117010-570-0000B	Rotary diesel filter assembly
1117002-L3H-0000	Diesel filter bracket assembly
Q617B12F36	Hexagonal head plug
1003061B621-000Z	Cylinder head cover under frame
K0010000-PJJD	CA6110 body positioning pin assembly
3602180-B81-JHK4M	Oil pressure sensor
3701010-215-0000	Integral alternator
1112010-640-0000-FW	Fuel injector assembly
4AW403A101-0000	Fuel Injection Pump Assembly (4AW403)
1005036-400-0000	Oil baffle - Crankshaft
1005120-017-SG80	Flywheel comes with ring assembly
F4200000-PJ4P	CA6DF2 four combination accessories
1001020-017-0000	Back left support
MM101091-PJGG	M101091 cylinder head fittings
F4200000-PJ6P	CA6DF2 six combination accessories
1005120-C11-0000	Flywheel comes with ring assembly
1006001-A51-0000	camshaft
1005001-A01-0000J	Crank shaft
1306013AM0A-013C	Thermostat top cover
Q1840640F36	Hexagon flange face bolt
3509300-B45-HJ1A	Air pressure pump return tubing assembly
1002061DB42-CS3A	Flywheel housing (supplementary machining drawings)
1008023-630-2000	Inlet nozzle
Q1840810F36	Hexagon flange face bolt
3701325-B5V-HL10	Connecting plate assembly
1308001AB41-XF20	Fan pad
1004011-6C1-0000B	piston
2000103-B51-0000	Hinged bolt
1104160DA02-0000	Fuel injection pump lubricating oil pipe assembly
1002098B101-0000	gasket
1001010BB41-AS10	Front mount support assembly
1006048A001-0000	Gear shaft (2)
1306571AM50-0C47T	Engine inlet pipe front support
1023010-29DW	Tension wheel assembly
1001001BA03-2010	Front right suspension
1003041-720-0000	Gasket strip - cylinder head cover housing
1104030-B61-0000	Fuel line assembly - Feed oil pump to wood filter
1007003AA01-0000	Valve guide seal
1009010-B61-DX4AXC	Oil pan assembly
3724080BE20-DF10	Engine harness assembly
3708010-E00-WZ10	Decelerating starter assembly
1307012C101-0000	Pump gasket - body
1008042A472-0000	Exhaust manifold
3509010-47T-145BJA	Air compressor assembly

1014025D600-0367	Snorkel assembly
1004010AB01-0000	Connecting rod assembly
1006053-M01	Timing intermediate gear shaft
1007028A002-0000	Air lock block
1104140-A03-0000	Injector return line assembly
Q1821050F36	Hexagon flange face bolt - thin rod
1012200AA02-0000	Oil filter outlet line assembly
1002141AA02-WP2A	Pushrod chamber cover
1104050-B5V-0000	Fuel injection body return pipe
1006100AB4D-0000	Timing idle gear fitting
1005120B53H-HL10	Flywheel and ring assembly
1303011-472-0000	Outlet pipe
1111115BB5N-0000E	ECU assembly
1003303-A01-0000P	Exhaust valve seat
XA010000-PJ4P	A01 Four combination accessories
1003050AB90-0000	Cylinder head cover
1003040BB46-WZ1A	Cylinder head cover supply assembly
1306100A64J-1B55VA	Thermostat component
1002101-520-0000	Cover plate
1014100BB46-ZX10	Respirator assembly
1306016AA34-0000	Water temperature sensor connector
1013100AB03-0000R	Oil cooler assembly
1009010AB61-DK5A	Oil pan assembly
1112010-440-0000	Fuel injector assembly
MM390000-PJ4P	CA6DM2-46E52-0000 four combination accessories
1161210AM6A-0000H	Urea nozzle assembly assembly
3708010-B81-ZX10C	Starter assembly
1307010B521-YT20	Water pump assembly
1008045A400-0000	Exhaust pipe pad assembly
1111010-A13-HMS20WWF	Fuel injection pump and controller assembly 4PL614
MM39000J-PJ4P	CA6DM2-46E52-000J four combination accessories
3509010A551-SJ10	Air compressor Assembly (supplementary drawing)
1009010-M71-070P	Oil pan assembly
2S1207001-6BE-0000	Heat resistant bolt M8×25
MM390000-PJ6P	Ca6dm2-46e52-00006 combination accessories
1007163-M50-000Y	Axial positioning sleeve
MM39000J-PJ6P	CA6DM2-46E52-000J six combination accessories
1009010DE00-0000	Oil pan assembly
MM70000JC-WXBB-PJGL-S	EGR pipe spare parts package
F49Y0000-PJ4P	49Y four-piece accessories
1011070-551-0010	Flowline assembly
1002061BM70-000JA	Gear house cover - flywheel housing
1008019-M70-0000	Intake box cover seal gasket
3504025-6BE-21609HC	Gasket - exhaust brake valve
1307010A473-219K	Water pump assembly
F49Y0000-PJ6P	49Y six-pack accessories
1004BBB-C00-0000	Piston ring assembly
1111010-675-0000TW	Fuel injection pump Assembly (Order No. : 6P1259)
1306015-600-400P	Degassing nozzle assembly
3509062AM39-0000	Quick insert screw joint - Air pump M18X1.5
1118094-M01	Gasket - supercharger return oil line
K0010000-PJLW	6110 connecting rod tile (set)
1308010A640-3133	Fan and fan clutch assembly
1308032A471-2010	Fan belt

1014010-M60-0000A	Oil and gas separator assembly
1308010-L3P-3600DAN	Fan and fan clutch assembly
3407020D800-A76A	Power steering oil pump assembly
1008024BM70-000J	Intake nozzle support
1007100AE00-0000	Rocker arm mechanism components
1207040AM70-000J	EGR cooler to EGR valve connection assembly
Q67627F36	Worm driven hose clamp
1308010-450-JH20	Fan assembly
1306033-L31-2030	Urea tank heating return connector
1117010AM50-02000	Fuel fine filter assembly
1003051A6C1-0000	Ignition coil sheath
1118060-624-SW10	Supercharger inlet line assembly
1014025-E00-2001L	Ventilator outlet pipe
1012010-C25-2010DHCNF	Oil filter assembly
1004023-M01	Connecting rod bolt
1307010BL30-XW10	Water pump assembly
1008017-E00-2001	Hose - intercooler
3509010-555-2040A	Air compressor Assembly (Supplement)
1109025-432-SG1A	Connecting tube - air filter outlet
1118010BB21-0000WY	Turbocharger assembly
1005060-556-0000M	Oil seal after combination
1307010-471-2010	Water pump assembly
1009010-M85-0777	Oil pan assembly
3509030-M5B-21301JS	Air pressure pump inlet pipe assembly
3509011-M50-02000	O-type rubber sealing ring 147X2.7
1009070AL3H-2020HC	Oil gauge assy
1118004-E00-WZ10	Exhaust manifold gasket
1007011A650-0000	Inlet valve
1208005A6A0-206DAHCCW	SCR post-processing system components
3509010-624-XJ10	Air compressor assembly
1601010FA71-KM10	Clutch housing assembly
1111216-C00-0000	Fuel injection pump transmission gear
3701013-L30-2010	Generator belt
1118080-420-0300	Return oil line assembly - Supercharger
1118019-656-4100	Air regulator adapter
3509010BL31-2030	Air compressor assembly
3603030-M60-0000V	Exhaust throttle return pipe assembly,
1003047-B90-0000	Cylinder head short bolt
1307012B460-0000	gasket
K1530000-PJTL	CA4110/125ZA5 camshaft fittings
1002016-M50-0000Y	Cylinder liner
1007051-BA0-0000	Push rod assembly
Q32008	Hexagon flange nut (turn trivalent chromium
1005190AM60-0000	Silicone oil shock absorber
1308088-M10-01085	Adjust bolt M12X80
1003046-E00-0000	Cylinder head bolt
2S1207015-E20-0000	EGR intercooler outlet pipe
1009060A47S-JH60	Install oil gauge tube assembly
1013611-M01	Hex socket plug
1210005BC30-2010AHCBW	Post-processing system components
1118091AM70-000J	Supercharger gasket
MM000000-PJ6P	81D six-pack accessories
3509020-420-2030	Air pressure pump return pipe assembly
3724080AM80-0000	Engine harness assembly

1118100AA51-0000WY	Supercharger assembly
1023021-B81-YT10	Wedge belt
1112013K29D	Fuel injector clamp bolt
XA01KM10-PJTT	A01-KM10 cylinder block fittings status
1009031-M54-082T	Oil pan seal gasket
1601400AB21-5010	Clutch cover and pressure plate assembly
1111010-051-BK2J	Fuel injection pump assembly 6AW130G
3509017-E00-0000	Air pump lubricating oil pipe fitting
1111010-676-1G435JTD	Fuel injection pump assembly BP5318A
1118014-MH0-0000	Supercharger bolt sleeve
1008131-630-3100	Intake nozzle - air filter
1117075AM5B-02001	Steel pipe support assembly 2
1207130ABA0-0000	EGR intercooler outlet pipe
1111010-15B-YFD10SE	Fuel injection pump
1009070-M35-051TJ	Oil gauge assy
1008001BA62-KM1A	Exhaust manifold (supplementary drawing)
3724080AB90-KM1A	Engine harness assembly
3724092CE20-WZ10	Integrated post-processor harness assembly
3750030-830-VP10	Preheating relay assembly
2S1006062-E20-0000	Camshaft chain rail mounting bolt
1104030C621-0000	Oil line assembly
3701010-E20-501AK	Generator assembly
L6700000-PJ4P	6DL1J-30 four combination accessories
1013013B520-0000	Oil cooler cover plate gasket
L6C10000-PJ4P	6C1 four-piece accessories
Q1841230F36	Hexagon flange face bolt
1209200-E00-2001IBW	DPF rear processor assembly
1306021-640-0863	Thermostat body
L6100000-PJLW	36D connecting rod shoe (pair)
1014017-M3A-2080AJ	Snorkel - gas separator
1308032A001-DD80	Fan belt
3407020-B90-JB2AR	Power steering oil pump assembly
3701324-M01	Generator limit block
3509050-M65-070N	Air compressor inlet tubing assembly
3407020AM10-3130	Power steering oil pump assembly
1308032-L00-0000	Fan belt
F5500000-PJZW	550 spindle tile (sleeve)
1002111AA01-0000	Crankshaft lower thrust plate
1005100-A5J-SS2A	Flywheel gear ring assembly
1013032-442-JH60	Circulating water joint (1)
1104160-A51-0000	Fuel injection pump lubricating oil pipe assembly
3602125BM70-0000	TFI4B-G Sensor Assembly
1111015-53H-HL10	Electric control unit pump assembly
1104050-6A0-206DAHCC	Return pipe assembly
3701010-C90-HL10M	Generator assembly
1118080A670-0000	Supercharger return oil line assembly
1601400-B90-504AK	Clutch cover and pressure plate assembly
1009010AM34-JH70J	Oil pan assembly
1007016BM70-0000	Exhaust valve
3724092AL3H-0000U	Integrated post-processor harness assembly
3724080-B91-5020F	Engine harness assembly
3724080-B91-5020K	Engine harness assembly
1306021-600-070A	Thermostat body
1006030-E20-0000	Camshaft chain tensioner assembly

1129050-E00-0000	Pump - Rail High pressure Tubing (1)
3701010-422-JH30	Generator assembly
1002401-M10-0000	Connector -SCR water intake
1005060-C00-0000M	Crankshaft rear oil seal
1161210-682-0000EM	Urea nozzle
1118010-48K-JHG10HY	Turbocharger assembly
3724080-49M-YT1T	Engine harness assembly
3509013-C00-0000	O-type rubber seal ring
1308051-61S-3100XZ	Fan pulley
1003010-550-0000A	Cylinder head assembly
1129042-570-0000	High pressure tubing clamp liner
3810020-600-070A	Oil pressure sensor
1007175-M60-0000	Rocker arm shaft assembly (four, five, six cylinders
1111100-A0Z-0000	Fuel injection pump assembly
3603011-65A-0000M	Rubber sleeve - Ignition coil
1207130EB90-0000	EGR intercooler outlet pipe
1008043-B90-JHK10	Exhaust manifold heat shield
3701010-473-JH10	Generator assembly
3701010-M34-XZ20J	Integral alternator assembly
3701322-L30-2010	Generator support
1118010AM35-2060ASH	Turbocharger assembly
1013011A300-0000	Oil cooler cover plate
1007024-M01	Valve spring seat
1111010-B5W-YFT1ALK	Fuel injection pump assembly
3509010-M10-JH10K	Air compressor assembly
1129090-M14-0000	High Pressure tubing Clamp Assembly (5)
1014022A621-0000	Return pipe - oil and gas separator to oil pan
1001025AE21-2001	Front mount cushion assembly
1003047-M50-0000	Cylinder head bolt
1118050B53H-HL10	Supercharger return oil line assembly
1007110-E00-0000	Intake valve rocker arm assembly
1003016-M30-0000	Fuel injector brass sleeve
3724080-621-2250	Engine harness assembly
WB310000-PJLW	B31 Connecting rod shoe (sleeve)
3750010A81D	Air heater
1004018A201-0000	Piston pin
1161230-L56-JH20B	Level sensor assembly
1129045-A51-0000	Pump to rail high pressure tubing assembly II
1014015-C11-0000	Oil-gas separator bracket 1
3603013A650-0000	Spark plug sleeve
1009070A600-3025	Oil gauge assy
MM70000JC-WXBC-PJLX-S	Front end gear train spare parts kit
1117010B101-0000	Rotary diesel filter assembly
1104030C29D	Fuel line Assembly (1)
1009010-B81-JHK4S	Oil pan assembly
1129DDDA649-0000	High pressure tubing assembly
3724080AM30-2060AZW	Engine harness assembly
1305010AB21-0000	Drain switch assembly
1308010-420-203BX	Fan and fan clutch assembly (same as 1308010B420-203BL)
3725050-682-0000	OBD diagnostic interface plug-in assembly
1118010-C11-0000	Turbocharger assembly
1207085B6BA-0000	Heat Shield Assembly -EGR valve
1012200-B81-JHK30	Oil filter outlet line assembly
3509020-471-2040	Air pressure pump return pipe assembly

1111011-29D	O-ring seal - fuel injection pump
1118080B600-3000	Supercharger return pipe assembly (stock available)
3810015AB48-AS20	Oil pressure sensor
1118086-M01	Gasket - supercharger return oil line seat
1111104A53H-HL10	Fuel injection pump auxiliary support - cylinder body
1009010AE00-SF20	Oil pan assembly
1117010-53D	Rotary diesel filter assembly
Q7341930	O-type rubber seal ring
3407020-M60-051N	Power steering oil pump assembly
1207100-A5H-DF1A	EGR valve
1003010-B21-505A	Cylinder head assembly
6205-2Z	bearing
1014021BE00-0000	Oil return hose
3724080B630-0A683	Engine harness assembly
Q1841225F36	Hexagon flange face bolt
1008301BE00-2001	Heat shield - Exhaust manifold
3509010-301-JH10	Air compressor assembly (for non-Jianghuai plant)
3724415-M60-0000	Engine harness support assembly
1117020-630-XW2C	Fuel prefilter assembly
3724080-E06-502AK	Engine harness assembly
3602125-A5F-0000	Air mass flowmeter assembly
1111015-E20-0000	Fuel injection pump transition plate
3407020-64J-1B65VA	Power steering oil pump assembly
3708010-101-BH1AM	Starter assembly
1111000-B12-AS10W	Fuel injection pump assembly
1003051-840-0000	High voltage cable protective sleeve
3509030A29D	Air pressure pump inlet pipe assembly
1009070BM35-078S	Oil gauge assy
1601210-051-201AX	Clutch driven disc assembly 395
1111100EA13-YFD10	Fuel injection pump assembly
1306063-81D	Bolts - For thermostats
1129065-M01	High pressure oil pipe clamp assembly 1 (diagram)
1013021-001-0000L	gasket
1011033-M01	Oil pump safety valve spring
3708010-440-JH10	Starter assembly
1307010-103-DL30	Water pump assembly
1013033-53D	Valve - Oil cooler bypass valve
1003012-E00-0000	Intake valve seat
2S1014024-E20-0000	Oil and gas separator intake hose
1009010-M01	Oil pan assembly
1104070-M80-0000	Oil lubrication pipe assembly
3602140-E00-0000	Intake pressure sensor
MM340B99R-PJTT	Cylinder block fittings
1023011-6BA-0000	Front wheel train support
2S1006060-L3H-0000	Timing intermediate gear assembly - Air pump
1306063AM65-078N	Hexagon flange bolt M10X197
1108092-432-XG10	Oil cut-off solenoid valve
1111229-M50-02000	O-type rubber seal ring 155X2.6
1207030CA5F-0000	EGR intake pipe assembly
1112100BB61-0000	Fuel injector assembly
1008016-B81-501AC	Intake manifold
1111010-B5N-0000LK	Fuel injection pump assembly
MM70000J-PJ4P	M70 4-pack accessories
1118010-670-0000H	Turbocharger assembly

1011030-E20-WZ10	Oil cooler assembly
1003031-M18-01066	Cylinder head cover
3754031-M63-JH10	Intake solenoid valve
XA71KM10-PJTT	A71-KM10 cylinder block fittings status
1207110EMH0-0000	EGR cooler assembly
1118040A300-0000	Tubing assembly - body
1207111-6BA-0000	Gasket -EGR cooler intake
1118080-840-057U	Supercharger return oil line assembly
1111010-439-0000W	Fuel injection pump assembly 6PW730
3407020A551-4420	Power steering oil pump assembly
1118142-637-0000	gasket
1008016A47J-1AY146	Intake manifold
1004011B432-0000	piston
1007031-53DP	Valve guide
1004027-001-0000	Connecting rod nut
1308032-B45-KM10	Fan belt
Q40312	Spring washer
Q40314	Spring washer
1111010-582-JH30L	Fuel injection pump assembly
2000110-103-DL30	Muffler assembly
1002061-630-0000	☆ Flywheel housing
1002200-M50-000JZ	Piston cooling nozzle assembly
Q40320	Spring washer
MM500B94T-PJTT	M50 cylinder block accessories
X3413M12X1.25F3	Hexagonal head screw plug M12X1.25
1118091-L60-0000	Gasket - Supercharger
LC200000-PJTT	CA4DLD-18E5 cylinder block fittings
1009026-81D	Turning pad - oil pan
XA71HG1A-PJTT	A71-HG1A cylinder block fittings status
1118060-47L-4030	Intake line assembly - Supercharger
1118010-48P-HZS10HY	Turbocharger assembly
1111100-A05-WZ1A	Fuel injection pump assembly 4PWS515A
1306064-81D	Bolt - thermostat
Q5210612	Round pin
1210100AE22-SF10ABW	Rear processor assembly
Q5210614	Round pin
Q5210616	Round pin
3407020A551-2020	Power steering oil pump assembly
1118145AM70-000J	Anti-surge valve outlet pipe assembly
1013034-53D	Type 0 seal ring - oil cooler bypass valve
1306008AA01-0000	Water temperature sensor
1013010-96E	Oil cooler assembly
1001031A201-0000	Left front support
1104030-B90-KE00	Fuel line assembly - Wood filter to oil pump
1004BBBAM50-0000A	Piston ring assembly
1017001-407-SG1A	gasket
1118010-L37-2010HCW	Turbocharger assembly
1009070-666-3134LDAYZ	Oil gauge assy
1104010-L50-0000	Oil return pipe Assembly (1)
1009070A6A0-206DAHC	Oil gauge assy
1129DDD-520-0000	High pressure tubing assembly (same as 1129010/025_4DF2)
1008020-E00-0000	Intake nozzle assembly
1207113-6BA-0000	Gasket -EGR water intake
1006060-626-0000D	Timing intermediate gear assembly

1007017-53D	Valve bridge - Intake valve
Q1841075F36	Hexagon flange face bolt
1013011-668-0B92R	Oil cooler body
1129080-96E	Pump to rail high pressure tubing assembly II
1150022-490-0000X	Natural Gas Connector Assembly (1)
3708010BB21-JH10	Starter assembly
1307010-621-0000H	Water pump assembly
3509010-M60-051N	Air compressor assembly
3407020AE00-YF1A	Power steering pump assembly
3407020-L56-JH20	Power steering oil pump assembly
1112010-C00-0000	Fuel injector assembly
1008058-M01	Exhaust manifold heat shield (2)
3724080A472-BS10	Engine harness assembly
L7000000-PJQD	CA4DL-20 paper pad set
1118120-M71-000JD	Supercharger inlet pipe assembly
1118011A624-YT2H	Heat shield
1207011AB21-0000	EGR valve intake port gasket
1004011-M50-0000M	piston
1014032-M60-0000	Outlet pipe - oil and gas separator
1005001AA5J-YF1A	Crankshaft (supplementary drawing)
1207056AM71-1D70PA	Connecting pipe support
1112010-055-0000	Fuel injector assembly
1210100-L3S-0000ABW	Rear processor assembly
L6100000-PJZW	36D spindle tile (pair)
1003013-M50-0000	Exhaust valve seat ring
1003120-A54-KM2P	Snorkel assembly
Q72320A	Sealing gasket (aluminum)
1003055B68F-1A42UA	Lug - clamp assembly
8103020AM35-2090C	Air conditioner compressor Assembly (diagram)
1104050D621-0000	Return pipe assembly
3509284A6A0-179GA	Air compressor inlet hose
1207034-M60-0000	Connect tube to EGR valve gasket
1111015-617-0000	Electric control unit pump assembly
1012010-591-0000	Oil filter assembly
1002078A201-0000	Gasket - gear chamber cover plate (with glue)
1013011-520-0000	Oil cooler cover plate
1004BBB-B43-0000T	Piston ring assembly
3407020-A63-DF30Q	Power steering oil pump assembly
1307010A151-ZC10	Water pump assembly
1111010-B56-HMS20WWF	Fuel injection pump and controller assembly 4PL610
1208100-M18-2A1500HCCY	SCR rear processor assembly
3701010-C90-HL1AM	Generator assembly
1118010-610-0000J	Supercharger assembly
1207035AB81-ZX10Z	Hose 2-EGR intercooler inlet pipe
8103020B6A0-206DAHC	Cold air compressor assembly
1009026-29D	Intermediate plate - oil pan
1008047-M01	Exhaust manifold short bolt
1002071CB35-HT10	Gear room
1308032-B45-KM20	Fan belt
F4540000-PJ4P	CA6DF2D four-piece fitting
1308100AA02-0000	Fan assembly
1003035-M01	Oil baffle assembly
1023015-B61-DK5A	Flat idler I
1005039-M50-0000	Oil pump drive gear - crankshaft

1008013-M01	Gasket for right cover plate of intake pipe
1002061-B5G-HL10P	Flywheel housing (supplementary drawing)
8102003-B43-YF3A	Air conditioning belt
1005120-M5B-0B2001	Flywheel comes with ring assembly
1307006-A02-ZY1A	Water pump nozzle
1006056-81D	Thrust plate - Timing intermediate gear shaft (3)
1001011AM55-092W	Front mounting bracket
1005190-551-BF10	Shock absorber assembly
1002071AB61-0000	Gear room (supplementary drawing)
1003041A600-000ZH	Gasket strip - upper cylinder head cover cover
1001002BA03-2010	Front left suspension
1006046-001-0000	bushing
1023011CM00-2060A	Front wheel train support
1005046-BD1-AS20	Pulley (supplementary drawing)
3509081AA02-YK1A	Pipe clamp
1306013-101-0020	Thermostat cover
1008041-53D	Exhaust manifold (1)
1008023A001-0010	☆ Intake nozzle
1306011-B80-SF10Z	Thermostat housing (supplementary drawing)
1601010AB45-HG10	Clutch housing assembly
1003123-B01-0000	Vent hose
1008072-M60-0000	Bracket - Exhaust pipe
1009010A001-0010	Oil pan assembly
1002061-630-0A70B	Gear house cover - flywheel housing
3808010-B81-ZX10Z	Water temperature sensor
1008045-M50-0000	Lock washer - exhaust pipe
3509010BM55-092W	Air compressor assembly
1009031-E00-0000	Oil pan seal gasket
3701010-600-0263	Alternator assembly